


400 LINEN

Assembly Instructions

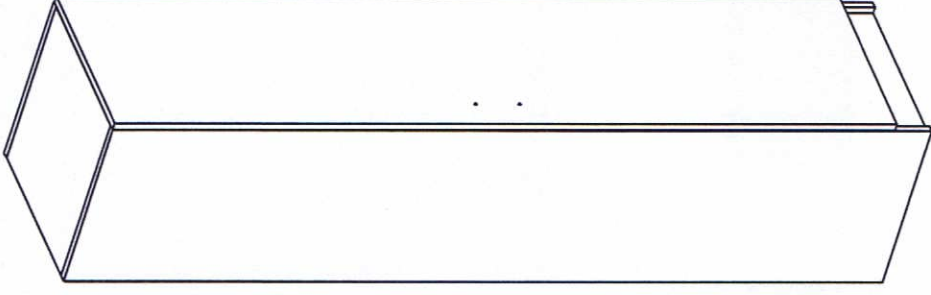

EUROFORM

EUROFORM

Thank you for purchasing this product

Remove all panels carefully.

Before beginning assembly, locate and identify each part according to the Component list.

The only tools necessary to assemble this unit are a Hammer and Phillips Head Screwdriver.

To protect the finish of this unit, assemble on a soft clean flat surface.

Perform each step in the order indicated.

Examine all packing material before discarding completely as shortages often occur by parts being left with packing material.

Hardware List


1. Screw in cam pins - 16
2. Cam fittings - 16
3. Hinges - 3
4. Shelf Supports - 12
5. furniture glides - 4
6. Bag of nails - 1
7. Handles - 1
8. M4 Handle Screws - 2

Component List



1. Doors - 1
2. Ends - 2
3. Fixed Shelves - 3
4. Adj. Shelves - 3
5. Back - 1
6. Kick rail - 2

Assembly Steps.

1. Lay out panels on a soft clean flat surface ensuring all the holes face upward.
2. Using a Phillips head screw driver insert the cam pins into the small holes in the ends, E1 and E2 as per the Diagram.
3. Place the cam fittings in the large holes in the fixed shelves, FS1, 2 & 3. Ensure the camfittings are facing the right direction as per the diagram and carefully tap into place with a hammer.
4. To attach the fixed shelves FS1, 2 & 3 to the end E1 turn E1 on its edge with the edge tape facing down. Attach FS1, 2 & 3 also with the edge tape facing down. Tighten cams.
5. Attach the kick rails to E1 as per the diagram. Tighten Cams.
6. Turn the end E2 on its edge with the edgetape also facing down and attach to the fixed shelves and kick rails. Align cams and pins. Tighten all cams.
7. Mark the position of FS2 on the raw edge of E1 and E2 in preparation for nailing the back on.
8. Place the back in position with raw side up. Square the cabinet with the back and nail into position.
9. Nail the furniture slides onto the bottom of E1 and E2.
10. Stand the cabinet upright.
11. Insert the Hinges into the door. Once in position tap into place with a hammer.
12. Carefully hold the door in position and attach the hinge to the end E2.
13. Attach the handle to the door.
14. Place the adjustable shelf pins in the desired position and install Adjustable shelves accordingly.

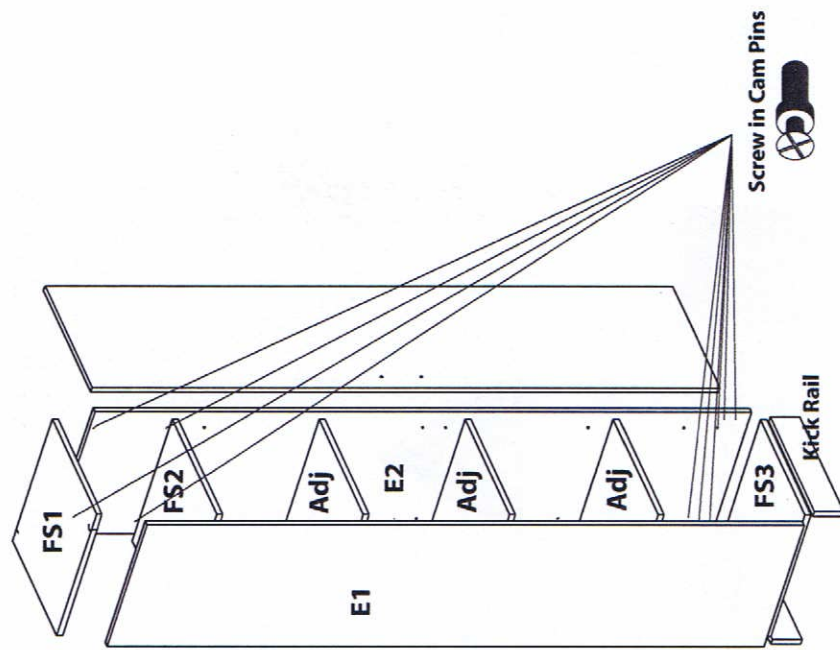

Screw in Cam & Cam Fitting

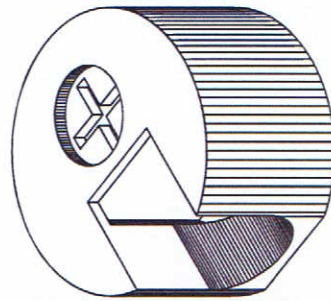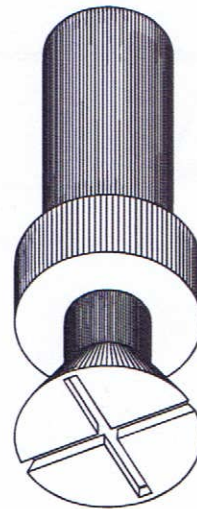

Do not overtighten or connector failure may occur.