


800 Combo Robe

Assembly Instructions

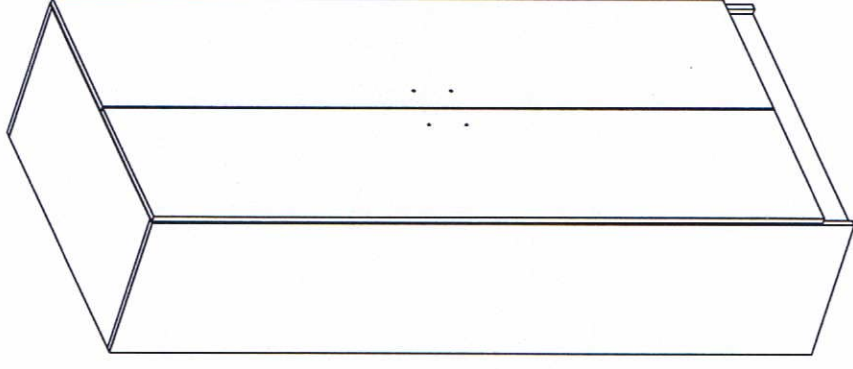

EUROFORM

EUROFORM

Thank you for purchasing this product

Remove all panels carefully.

Before beginning assembly, locate and identify each part according to the Component list.

The only tools necessary to assemble this unit are a Hammer and Phillips Head Screwdriver.

To protect the finish of this unit, assemble on a soft clean flat surface.

Perform each step in the order indicated.

Examine all packing material before discarding completely as shortages often occur by parts being left with packing material.

Assembly Steps.

1. Lay out panels on a soft clean flat surface ensuring all the holes face upward.
2. Using a Phillips head screw driver insert the cam pins into the small holes in the ends, E1 and E2 and in the fixed shelves FS2 & FS3 as per the Diagram.
3. Place the cam fittings in the large holes in the fixed shelves, FS1, 2 & 3. Ensure the cam fittings are facing the right direction as per the diagram and carefully tap into place with a hammer.
4. To attach the fixed shelves FS1, 2 & 3 to the end E1 turn E1 on its edge with the edge tape facing down. Attach FS1, 2 & 3 also with the edge tape facing down. Tighten cams.
5. Attach the kick rails to E1 as per the diagram. Tighten Cams.
6. Turn the end E2 on its edge with the edgetape also facing down and attach to the fixed shelves and kick rails. Align cams and pins. Tighten all cams.
7. Place the cam fittings in the large holes in the divider.
8. To attach the divider make sure the adjustable shelf holes are facing each other and the hanging rod holes line up as the divider can be installed upside down.
9. Align with pins and tighten cams.
10. Mark the position of FS2 on the raw edge of E1 and E2 in preparation for nailing the back on.
11. Place the back in position with raw side up. Square the cabinet with the back and nail into position.
12. Nail the furniture slides onto the bottom of E1 and E2.
13. Stand the cabinet upright.
14. Screw in the Hanging Rod Clips and install Hanging Rod.
15. Insert the Hinges into the doors. Once in position tap into place with a hammer.
16. Carefully hold each door in position and attach the hinge to the ends E1 and E2.
17. Attach the handles to the doors.
18. Place the adjustable shelf pins in the desired position and install Adjustable shelves accordingly.

Hardware List

1. Screw in cam pins - 20
2. Cam fittings - 20
3. Hinges - 6
4. Shelf Supports - 12
5. furniture glides - 4
6. Bag of nails - 1
7. Handles - 2
8. M4 Handle Screws - 4
9. Hanging Rod - 1
10. Hanging Rod Clips - 2

Component List

1. Doors - 2
2. Ends - 2
3. Fixed Shelves - 3
4. Adj. Shelves - 3
5. Divider - 1
6. Kick rail - 2
7. Back - 1

Screw in Cam & Cam Fitting



Do not overtighten or connector failure may occur.

